


## 11.TCS OFF Switch

### A: REMOVAL

- 1) Remove the instrument panel lower cover.
- 2) Remove the screws, and then remove the TCS OFF switch.

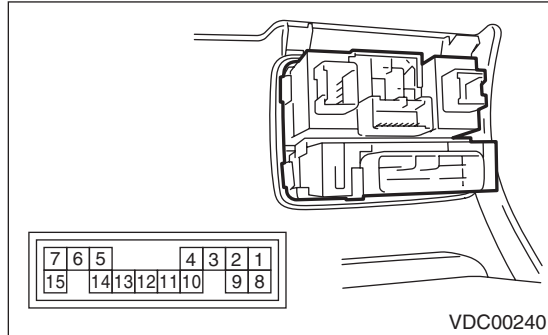

### B: INSTALLATION

Install in the reverse order of removal.

### C: INSPECTION

Measure the resistance between the TCS OFF switch terminals.

Switch position	Terminal No.	Standard value
ON	5 — 15	Less than 1 $\Omega$
OFF	5 — 15	1 M $\Omega$ or more

If NG, replace the TCS OFF switch.

# VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

## *VDC(diag)*

---

	Page
1. Basic Diagnostic Procedure .....	2
2. Check List for Interview .....	4
3. General Description .....	8
4. Electrical Component Location .....	10
5. Control Module I/O Signal .....	14
6. Subaru Select Monitor .....	20
7. Read Diagnostic Trouble Code (DTC) .....	29
8. Inspection Mode .....	30
9. Clear Memory Mode .....	31
10. Warning Light Illumination Pattern .....	32
11. List of Diagnostic Trouble Code (DTC) .....	48
12. Diagnostic Procedure with Diagnostic Trouble Code (DTC) .....	52
13. General Diagnostic Table .....	135